


THANK YOU FOR BUYING A HOTPOINT PRODUCT

In order to receive a more complete assistance, please register your product on www.hotpoint.eu/register



Before using the appliance carefully read the Safety Instruction.


PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance.

CONTROL PANEL

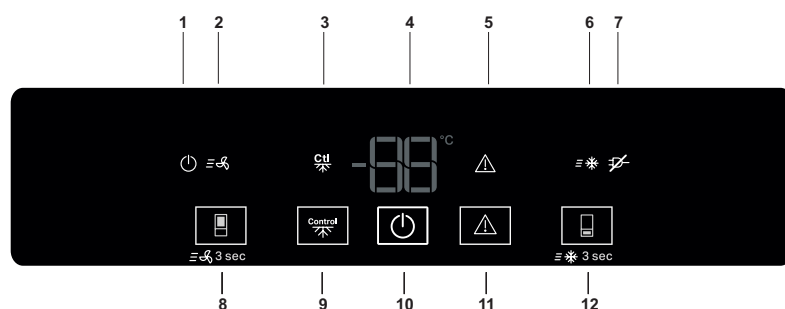

1. On/stand-by indicator
2. Super cool indicator
3. Precision control indicator
4. Fridge/freezer temperature display (°C)
5. Stop alarm indicator
6. Super freeze indicator
7. Black out alarm indicator
8. Fridge temperature button / super cool button
9. Precision control button
10. On/stand-by
11. Stop alarm
12. Freezer temperature button / super freeze button

ON/STANDBY

To put the product in Stand-by, press and hold the On/ Stand By button for 3 seconds. All the indicators turn off except On/Standby indicator. Press again to reactivate the appliance.

FRIDGE TEMPERATURE

To adjust the Fridge Temperature, press the Fridge °C button. The Fridge Temperature can be adjusted between +2°C and + 8°C, as shown by the Fridge Temperature LEDs.

FREEZER TEMPERATURE

To adjust the Freezer Temperature, press the Freezer °C button. The Freezer Temperature can be adjusted between -16°C and -24°C, as shown by the Freezer Temperature LEDs.

SUPER COOL

Using Super Cool function it is possible to increase the cooling capacity in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Super Cool button to activate Super Cool function. When activated, the Super Cool indicator turns on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Super Cool button again.

SUPER FREEZE

The use of this function is recommended when placing a very high quantity of food to be frozen in the freezer compartment. 24 hours before freezing fresh food, press the Super Freeze button to activate the Super Freeze function. When activated, the Super Freeze indicator turns on. After 24 hours place the food to be frozen in the middle freezing zone of freezer compartment. The function is automatically disabled after 48 hours, or can be manually disabled by pressing Super Freeze button.

PRECISION CONTROL FUNCTION

Precision control function is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum, thanks to an innovative air system, totally independent from the fridge. Freeze burns are reduced up to 60% and food preserves its original quality and color. To activate/deactivate the precision control function simply press the precision control function button. The function works properly in a defined range of temperature: between -22°C and -24°C.

When the function is engaged and the current temperature in the freezer is set to the warmer set point than -22°C, the temperature is automatically set to -22°C to match the working range. If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off. In case of Super freezing is engaged, the function "Precision control function" is inhibited until the Super Freezing function switched off.

FAN*

The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food. The fan will start/stop working depending on the temperature and/or humidity level inside the fridge. If the appliance has the Fan it can be equipped with the antibacterial filter. If the appliance has the Fan it can be equipped with the antibacterial filter. Visit the website page or contact consumer service to purchase the filter.


LED LIGHT

If the LED light system does not work, please contact the Service to replace it.

Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.

HUMIDITY CONTROL*

Open the humidity regulator (position B) if you want to store food in a less humid environment like fruit, or close it (position A) to store food in a more humid environment like vegetable.

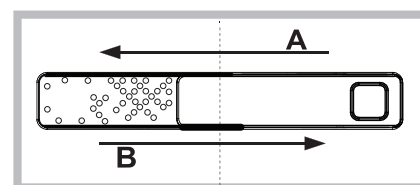

TUCK SHELF*

Thanks to the rail system, this shelf allows you to slide under the front part, creating an extra space for storing tall bottles or pitchers.

EASY ACCESS TRAY IN FREEZER*

Freezer tray is useful to easily access frequently used products, freeze or simply store leftovers or small items.

* Available only on certain models

NO-FROST REFRIGERATOR COMPARTMENT

Refrigerator compartment defrosting is completely automatic. Droplets of water on the rear wall inside the refrigerator compartment indicate that the automatic defrost phase is in progress.

The defrost water is automatically run into a drain hole and collected in a container, where it evaporates.

FRESH ZONE 0°

The Fresh Zone 0° compartment guarantees a temperatures operating range from -2°C to 3°C depending on chosen fridge temperature setting which is ideal to:

- store meat, fish and delicate food;
- rapid cooling of hot foods;
- low temperature defrosting (it inhibits the proliferation of microorganisms)


You can get the 0°C temperature, in standard conditions, when the fridge compartment temperature is set for minimum temperature. Remember that by changing the fridge temperature you change the Fresh Zone 0° compartment temperature as well. Keep in mind that Fresh Zone 0° compartment is a mechanical feature operating all the time, it cannot be switched off.

NO-FROST FREEZER COMPARTMENT

No Frost freezers provide chilled air circulation around the storage areas, and prevent the formation of ice, thereby completely eliminating the need for defrosting.

Frozen items don't stick to the walls, labeling stays legible and storage space remains neat and clear.

HOW TO STORE FRESH FOOD AND BEVERAGE

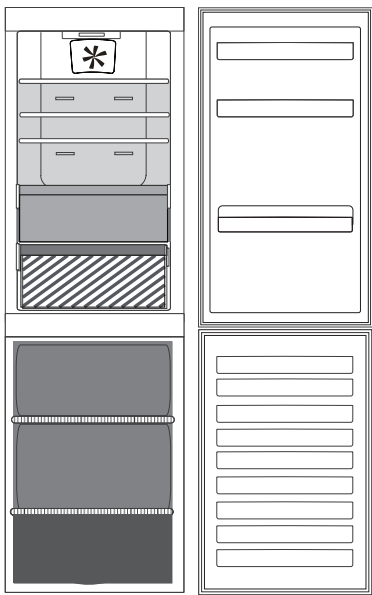


Legend



TEMPERATE ZONE

 Suggested for storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



COOL ZONE

Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt



COOLEST AREA

Suggested for the storage of cold cuts, desserts, meat and fish



FRUIT & VEGETABLE DRAWER



FREEZER DRAWERS



FREEZING ZONE DRAWER

(Max cool zone)
Suggested to freeze fresh / cooked food.

ALARM TABLE

Alarm type	Signal	Cause	Cure
Door open alarm	Door open alarm indicator remains on, the acoustical alarm is activated and the Alarm Indicator blinks.	The Fridge or Freezer door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Temperature display blinks (°C) and the Alarm Indicator remains on.	Inside the Freezer the temperature is not adequate.	Press the Stop Alarm button; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator remains on until a temperature < -10°C is reached.
Long black-out alarm	The Black Out Alarm icon remains on, the Alarm indicator blinks.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button; the acoustical alarm stops.
Malfunction	The letter "F" blinks on the display (°C).	Product malfunction.	Contact the After-sales Service.

* Available only on certain models

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance is not working.	There may be an appliance power supply problem.	• Check if power cable plugged into a live socket with the proper voltage. • Check if the protection devices and fuses of the electrical system in your home.
There is water in the defrost pan.	This is normal in hot, damp weather. The pan can even be half full.	• Make sure the appliance is level so that the water does not overflow.
The edges of the appliance cabinet, which come in contact with the door seal, are warm to the touch.	This is not a defect. This is normal in hot weather and when the compressor is running.	
The light does not work.	The light may need replacing. The appliance may be in On/Stand-by mode.	• Make sure if the protection devices and fuses of the electrical system in your home work well. • Check if the power cable is plugged into a live socket with the proper voltage • In case the LEDs are broken the user must call the Service for exchange of the same type available only at our Aftersales Service Centers or authorized dealers.
The motor seems to run too much.	Motor running time depends on different things: number of door openings, amount of food stored, temperature of the room, setting of the temperature controls.	• Make sure that the appliance controls are correctly set. • Check if there is not a large amount of food been added to the appliance. • Check that the door is not opened too often. • Check that the door close properly.
The appliance temperature is too high.	There could be various causes (see "Solutions").	• Make sure that the condenser (back the appliance) is free of dust and fluff. • Make sure that the door properly closed. • Make sure that the door seals properly fitted. • On hot days or if the room is warm, the motor naturally runs longer. • If the appliance door has been left open for a while or if large amounts of food have been stored, the motor will run longer in order to cool down the interior of the appliance.
The doors do not open and close properly.	There could be various causes (see "Solutions").	• Check that food packages are not blocking the door. • Check that the internal parts or automatic ice maker are not out of position. • Check that the door seals are not dirty or sticky. • Ensure the appliance is level.

* Available only on certain models



Policies, standard documentation, ordering of spare parts and additional product information can be found by:

- Visiting our website **docs.hotpoint.eu** and **parts-selfservice.whirlpool.com**
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



Hotpoint

